



HOW TO READ THE REGISTER ON THE COLD WATER & HOT WATER TURBINE METERS



Sample Dialface reading in U.S. Gallons
Cubic Feet and Metric registration also available

How to Read the Register:

- Read numbers straight across from left to right (take note of the multiplier “X 100”, “X 1000”, or “X 10000” above the moving wheels). Multiply the number by the multiplier to achieve your reading.

Example 1: The sample above has a “X 100” register. If the moving wheels read 123456, and the multiplier of “X 100” and the actual reading would be 12,345,600.

Example 2: If the sample above were to have a “X 1000” Register and the moving wheels read 123456, with the multiplier of “X 1000”, the actual reading of the register would be 123,456,000.

- If a finer increment reading is desired, take note of the smaller odometer wheels in the register.

“X 100” = 100 gallon increments
“X 10” = 10 gallon increments
“X 1” = 1 gallon increment