


# JL SERIES PARTS & ASSEMBLIES

## 5/8" THRU 2" SIZES

Drawing A shows the breakdown of parts for the 625JL, 750JL, and 1000JL series meters.


Drawing B shows the breakdown of parts for the 150JL and 200JL series meters.

For ordering information of parts, continue to last page and view part assemblies.

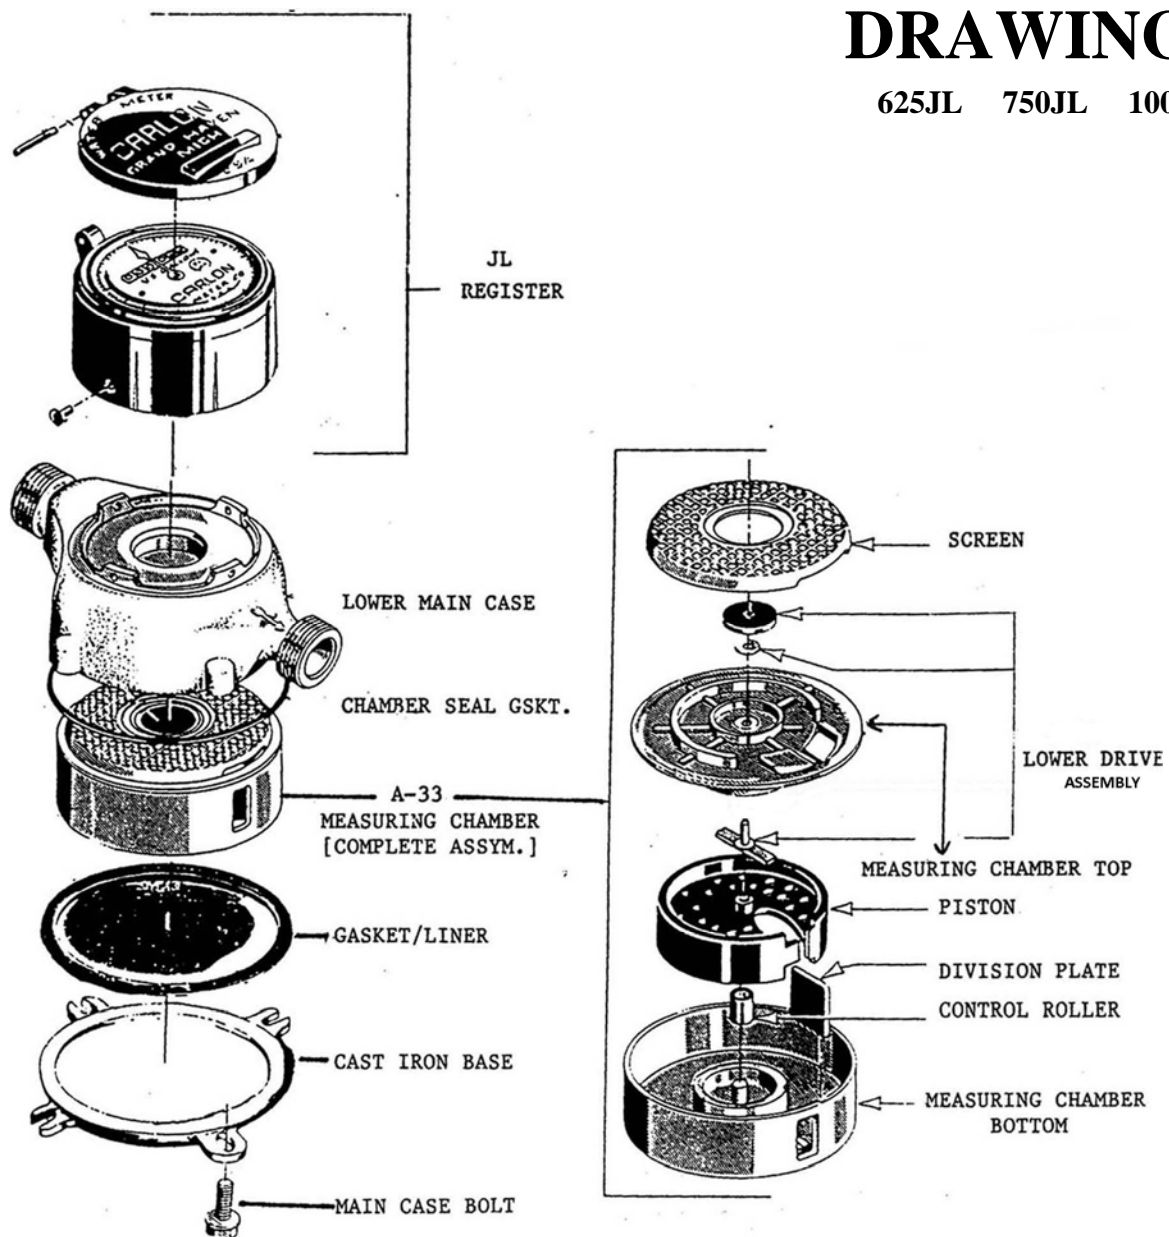

# DRAWING B

150JL AND 200JL

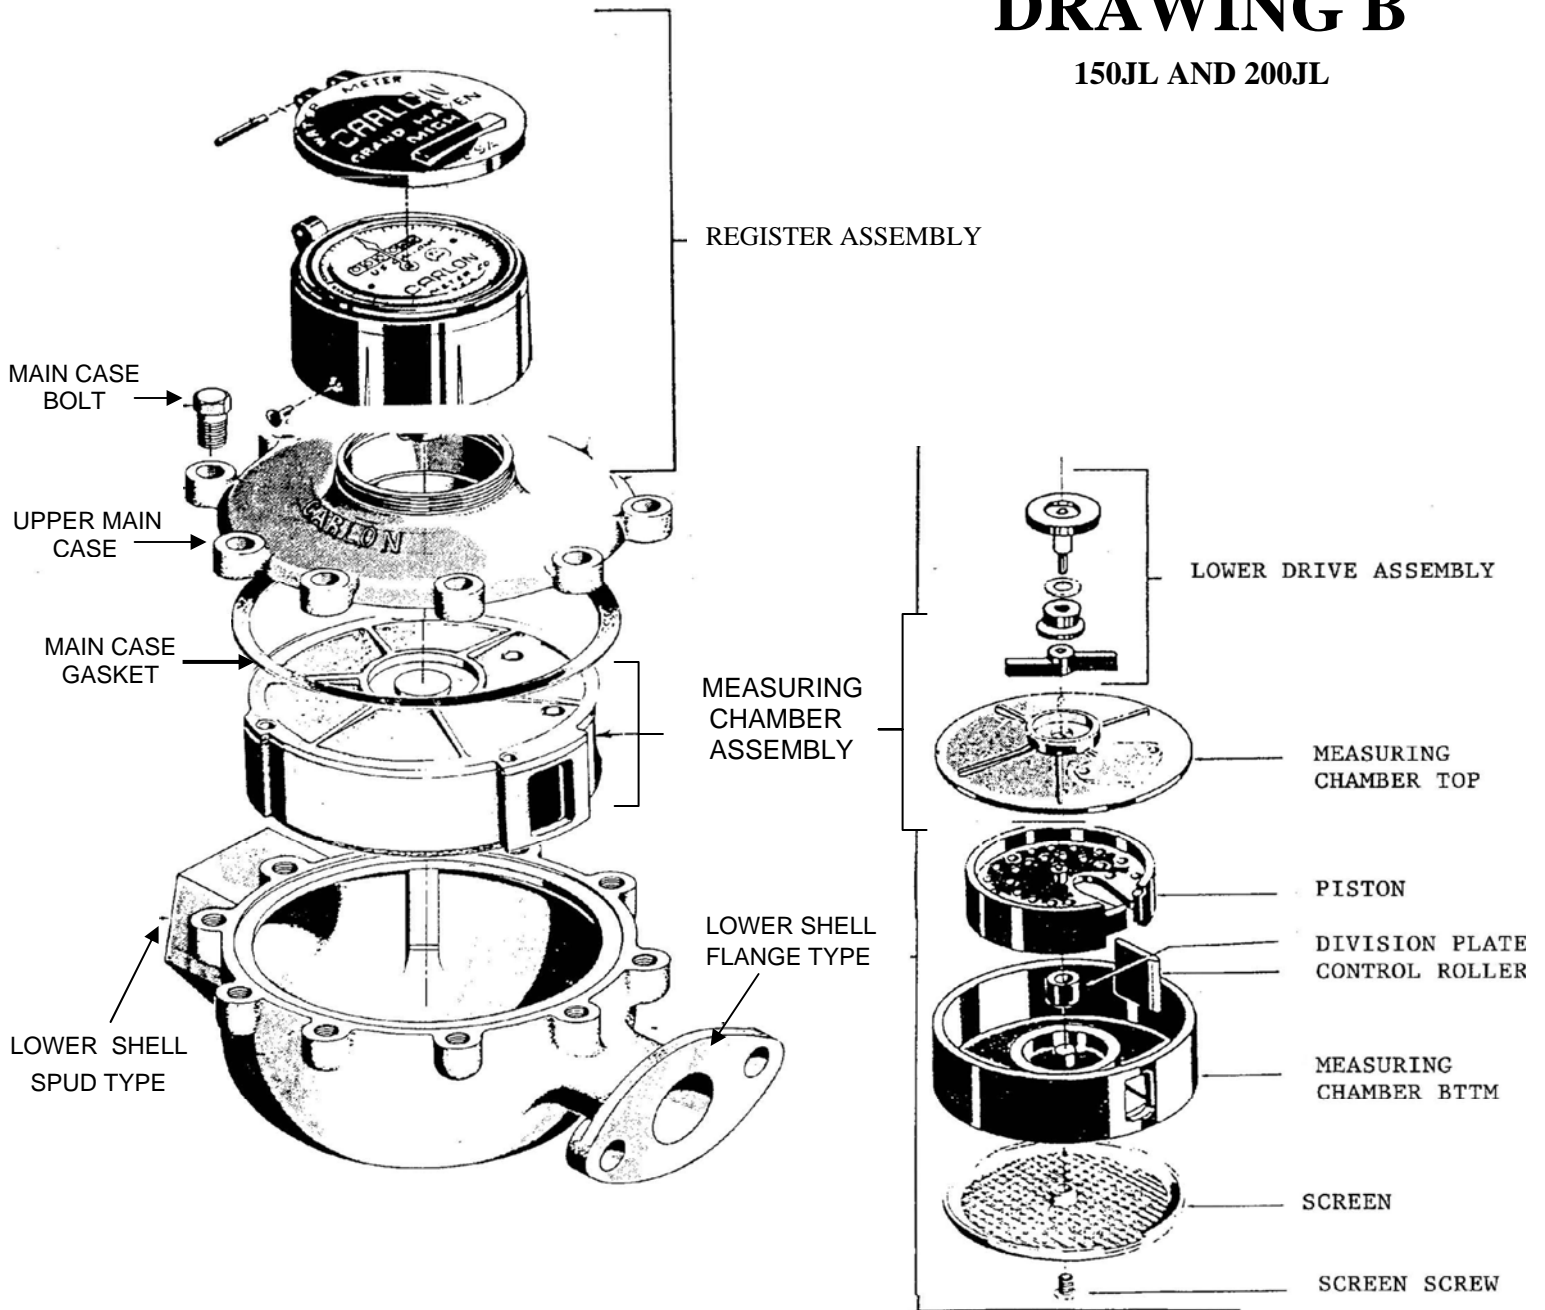

MODEL	METER/PIPE SIZE	MODEL	METER/PIPE SIZE
625JL	5/8" X 1/2"	150JLF	1 1/2"
6251JL	5/8" X 3/4"	150JLS	1 1/2"
750JL	3/4" X 3/4"	200JLF	2"
1000JL	1"	200JLS	2"

# JL SERIES PARTS & ASSEMBLIES

## 5/8" THRU 2" SIZES

WHEN ORDERING, PLEASE SPECIFY: 1. QUANTITY 2. METER SIZE 3. ASSY NUMBER & DESCRIPTION  
(WHEN ORDERING PARTS, AN UPPER SHELL CASTING MARK AND/OR SERIAL NUMBER IS REQUIRED)

ASSEMBLY NUMBER	ASSEMBLY DESCRIPTION	PARTS ASSEMBLY LIST
<b>A31(MODEL NUMBER)</b> Example: A31750JL	JL REGISTER	REGISTER LID, HINGE PIN LOCKING PINS
<b>A309R (MODEL NUMBER)</b> Example: A309R750JL	GENERATOR REGISTER	GENERATOR REGISTER
<b>A31R9</b>	REMOTE READER / OVR FOR GENERATOR REGISTER	REMOTE READER
<b>A14 (MODEL NUMBER)</b>	625, 750 & 1000 JL METER BODY ASSEMBLY	METER BODY CHAMBER SEAL GASKET MAIN GASKET/LINER CAST IRON METER BASE
<b>A14 (MODEL NUMBER)</b>	150JL & 200JL METER BODY	LOWER MAIN CASE UPPER MAIN CASE MAIN CASE GASKET MAIN CASE BOLTS ALL SCREWS NECESSARY
<b>A33 (MODEL NUMBER)</b>	MEASURING CHAMBER ASSEMBLY	CHAMBER BOTTOM CHAMBER TOP LOWER DRIVE ASSEMBLY PISTON CONTROL ROLLER DIVISION PLATE SCREEN ALL SCREWS NECESSARY CHAMBER SEAL GASKET MAIN CASE GASKET
<b>A30 (MODEL NUMBER)</b>	CAST IRON BASE KIT	CAST IRON BASE GASKET/LINER BOLTS
<b>A21 (MODEL NUMBER)</b>	LOWER DRIVE ASSEMBLY	LOWER DRIVE SHAFT WASHERS MAGNET GASKETS
<b>A35 (MODEL NUMBER)</b>	SEAL & SCREEN KIT	MAIN CASE GASKET CONNECTION GASKETS CHAMBER SEAL GASKETS GASKET/LINER SCREEN AND SCREWS

**MINIMUM BILLING: \$50.00**